



FT8 Radio Settings

This guide was developed using the suggested settings from Don Whitman KK9H

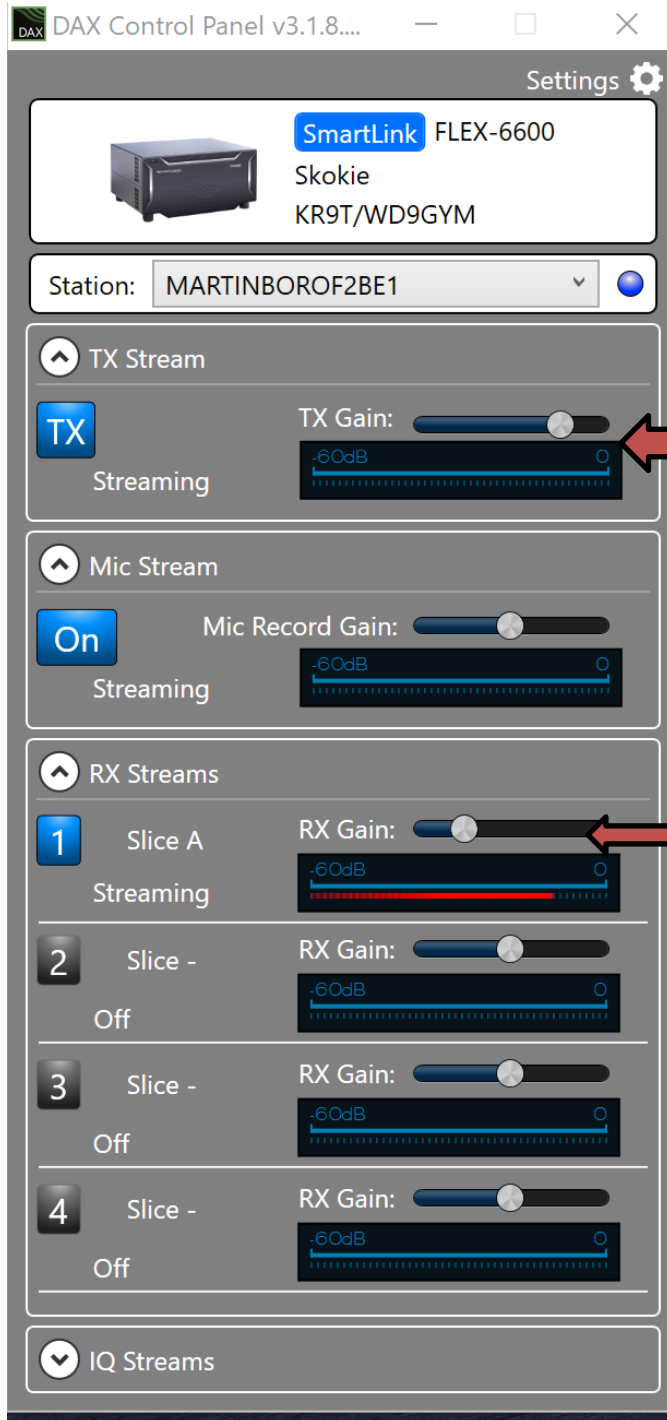

The transmit output level should be adjusted by the DAX "TX Gain" slider. This will ensure the cleanest signal.

Adjust the RX Gain so the receive signal on the FT8 screen hovers around 30dNB when no signals are present.

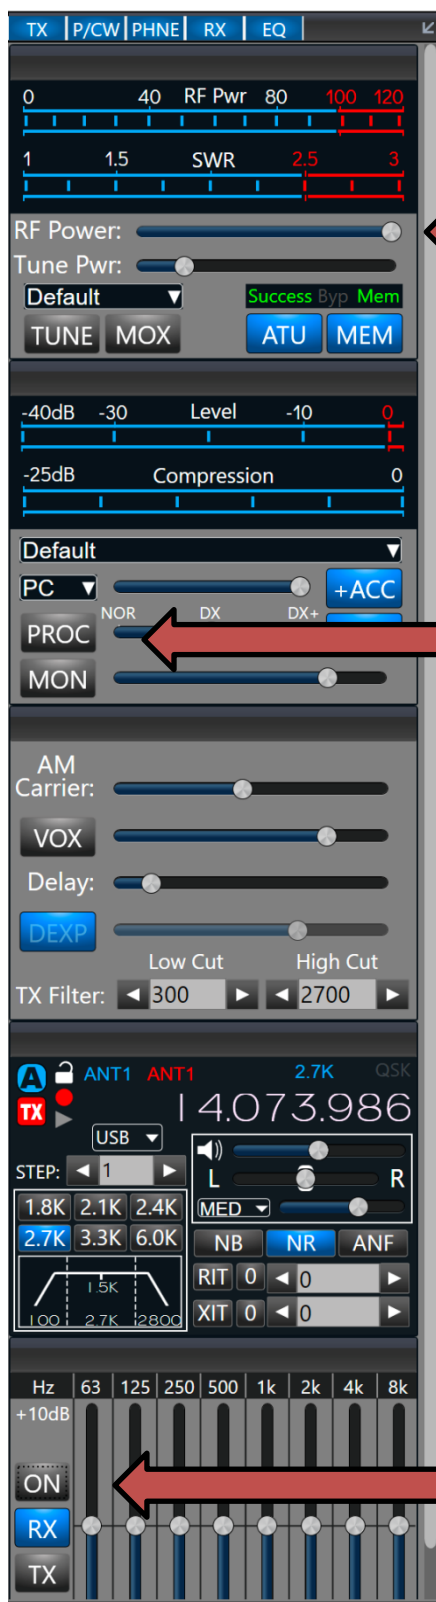

Leave the "RF Power" slider all the way to the right at the 100 watt setting. The 100 watt Flex radio transmitter output should be limited to 50 watts maximum when used with continuous duty modes like PSK31, FT4, FT8, RTTY, etc.

Ensure that the processor is turned off.

The mixer sliders at the should be set to a flat response or simply set the "ON" button so it is not highlighted in blue.